

NOTE: You will also need about a yard of clear lacing to assemble this project.





Instructions

1. Using the small square pegboard, place all the beads for your project.
2. Cover the completed design with the ironing paper. Keeping the iron level, gently iron the beads in a circular motion for about 10 seconds to fuse the beads evenly. Ironed properly, the beads will still have an open center. On a 3-D project such as this, **DO NOT OVER-IRON** the beads as it will make the centers of the beads close and can make assembly difficult.
3. Once the design is cool, peel off the ironing paper. Lift your design from the pegboard; flip the design over and repeat step #2. Your pegboard and ironing paper are reusable.




Bead Colors/Qtys Needed:

- Yellow - 3
- Black - 329
- White - 23

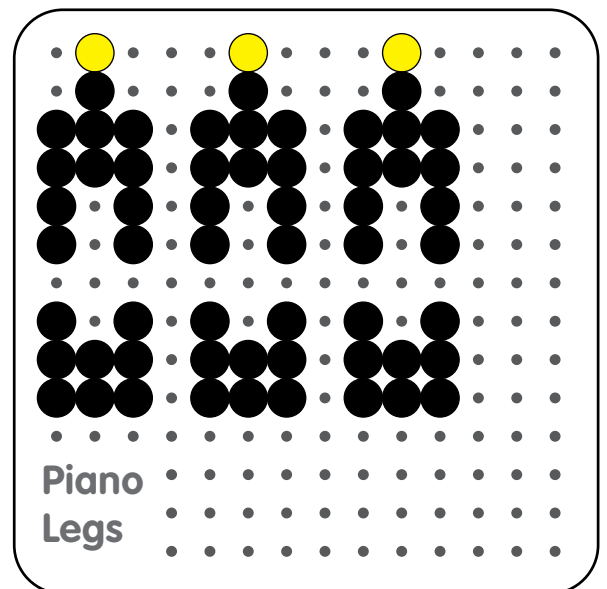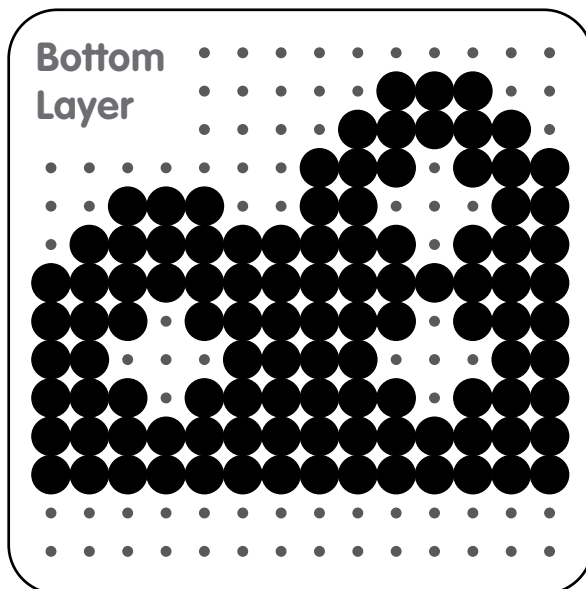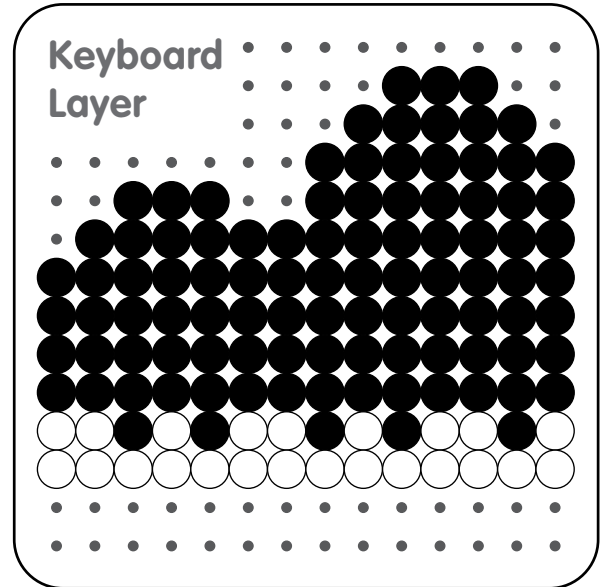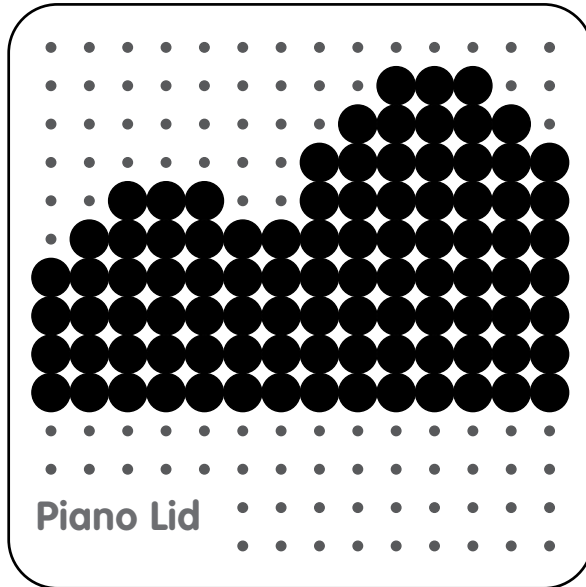

Continued on next page

1

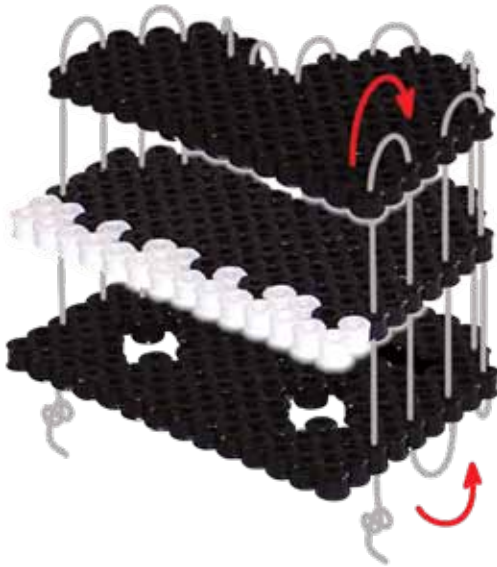


Use the clear lacing (shown here in grey) to attach together the bottom layer, keyboard layer, and lid.

2



Take the two sections of each leg, turn them at right angles to each other, and slide them together.

3

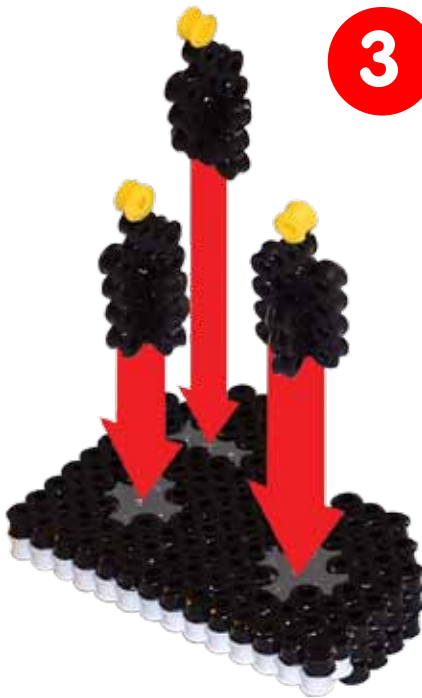

Turn the assembled piano piece so the bottom is face up. Insert the legs into the slots of the bottom layer. Turn piano right side up.

