




## Instructions


1. Use the large square pegboard for your project. If you're using a clear pegboard, slide the actual-size pattern underneath it. Place all the beads for the design.
2. Cover the completed design with the ironing paper. Keeping the iron level, gently iron the beads in a circular motion for about 10 seconds to fuse the beads evenly. Ironed properly, the beads will still have an open center. On a 3-D project such as this, DO NOT OVER-IRON the beads as it will make the centers of the beads close and can make assembly difficult.
3. Once the design is cool, peel off the ironing paper. Lift your design from the pegboard; flip the design over and repeat step #2. Your pegboard and ironing paper are reusable.

### Bead Color/# Needed:

- Light Pink - 33
- Purple - 5
- White - 359

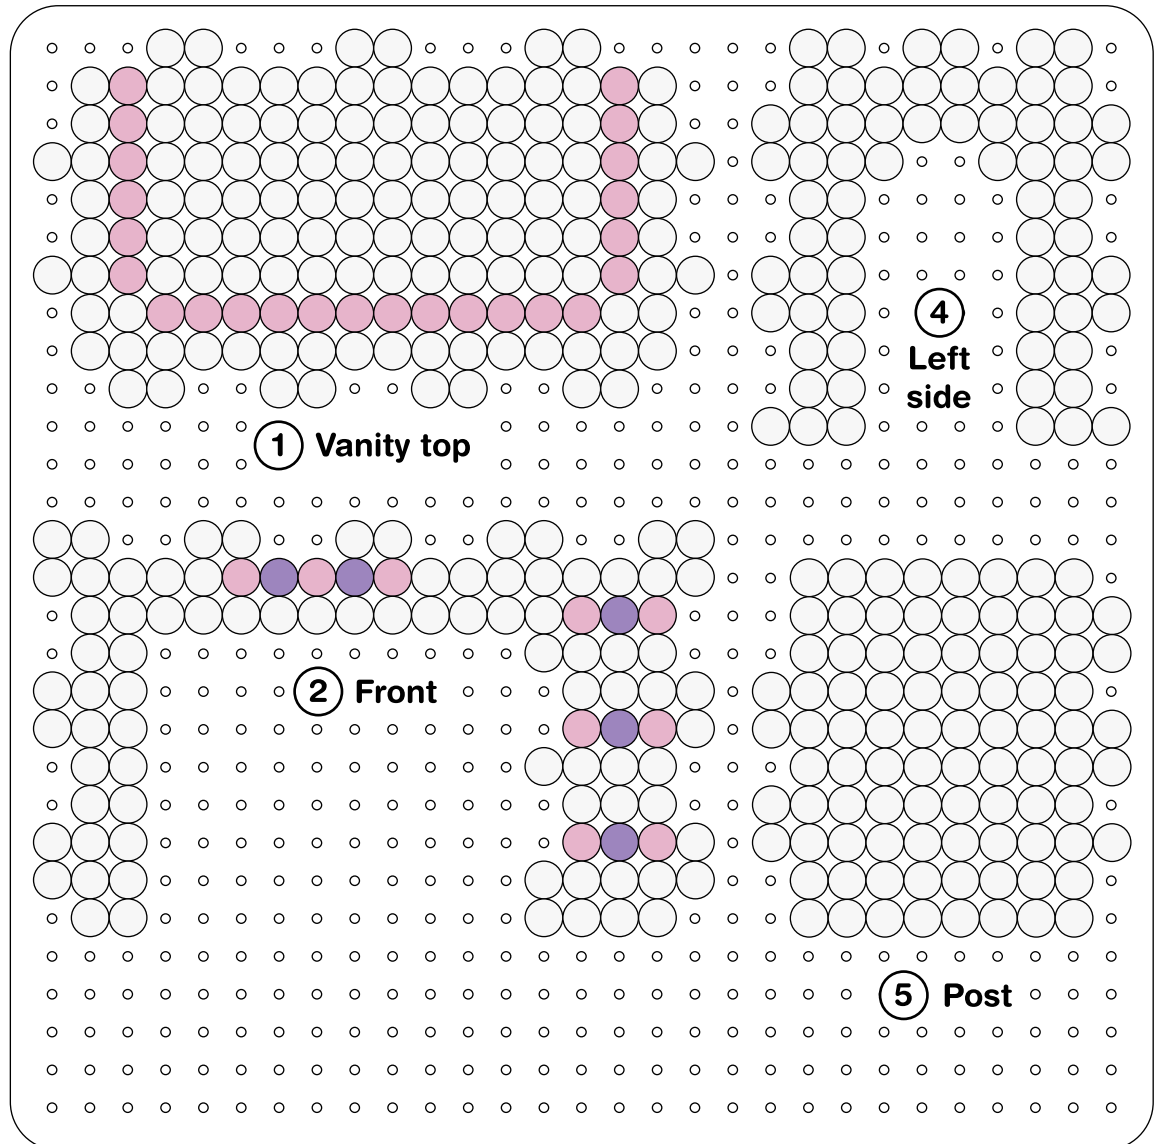

Continued on next page

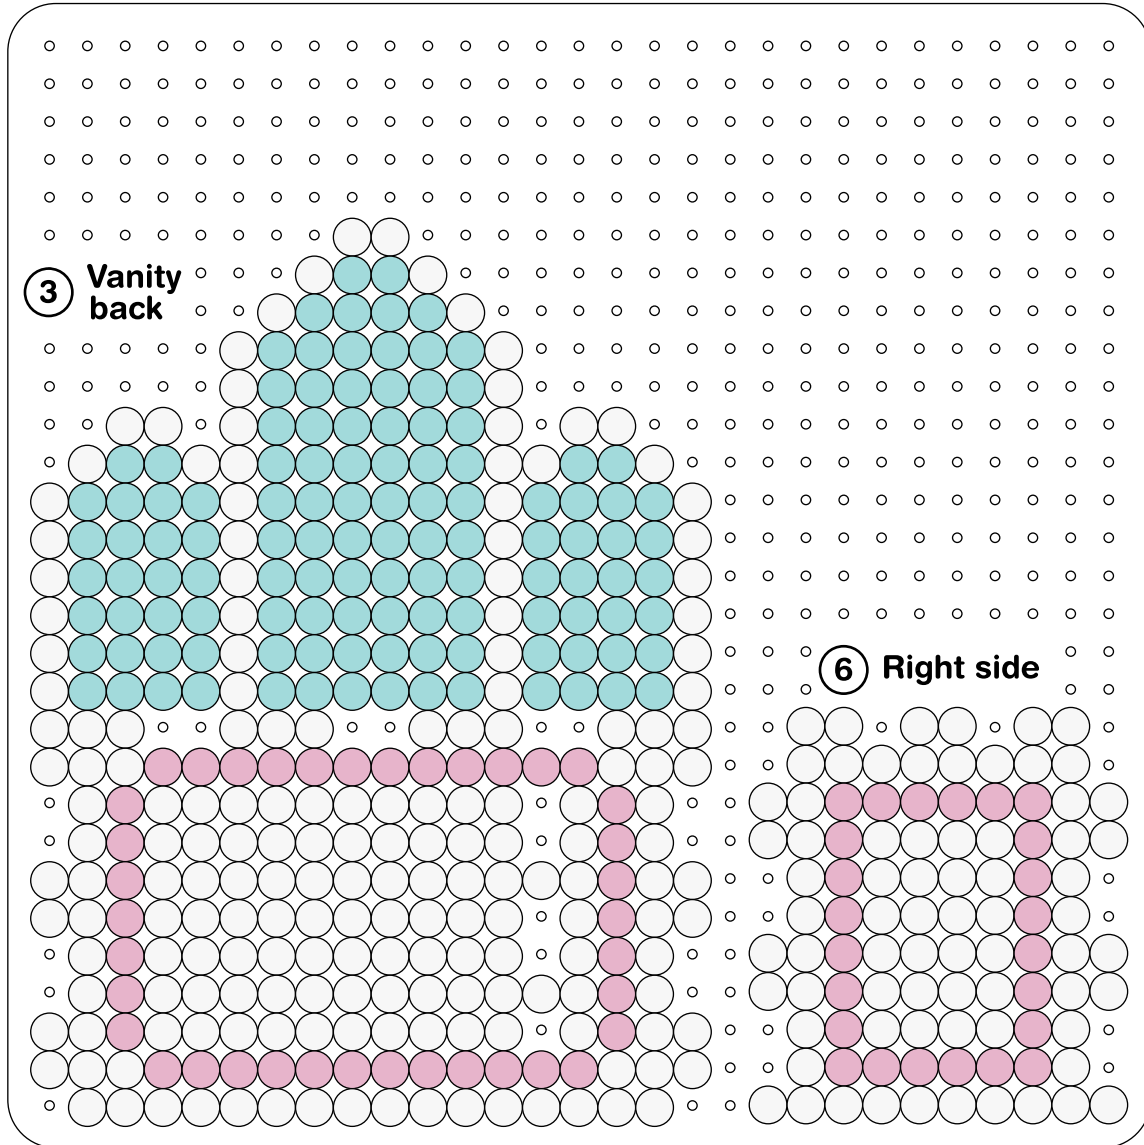


**Bead Color/# Needed:**



- Light Pink - 62
- Light Green - 118
- White - 257

Continued on next page

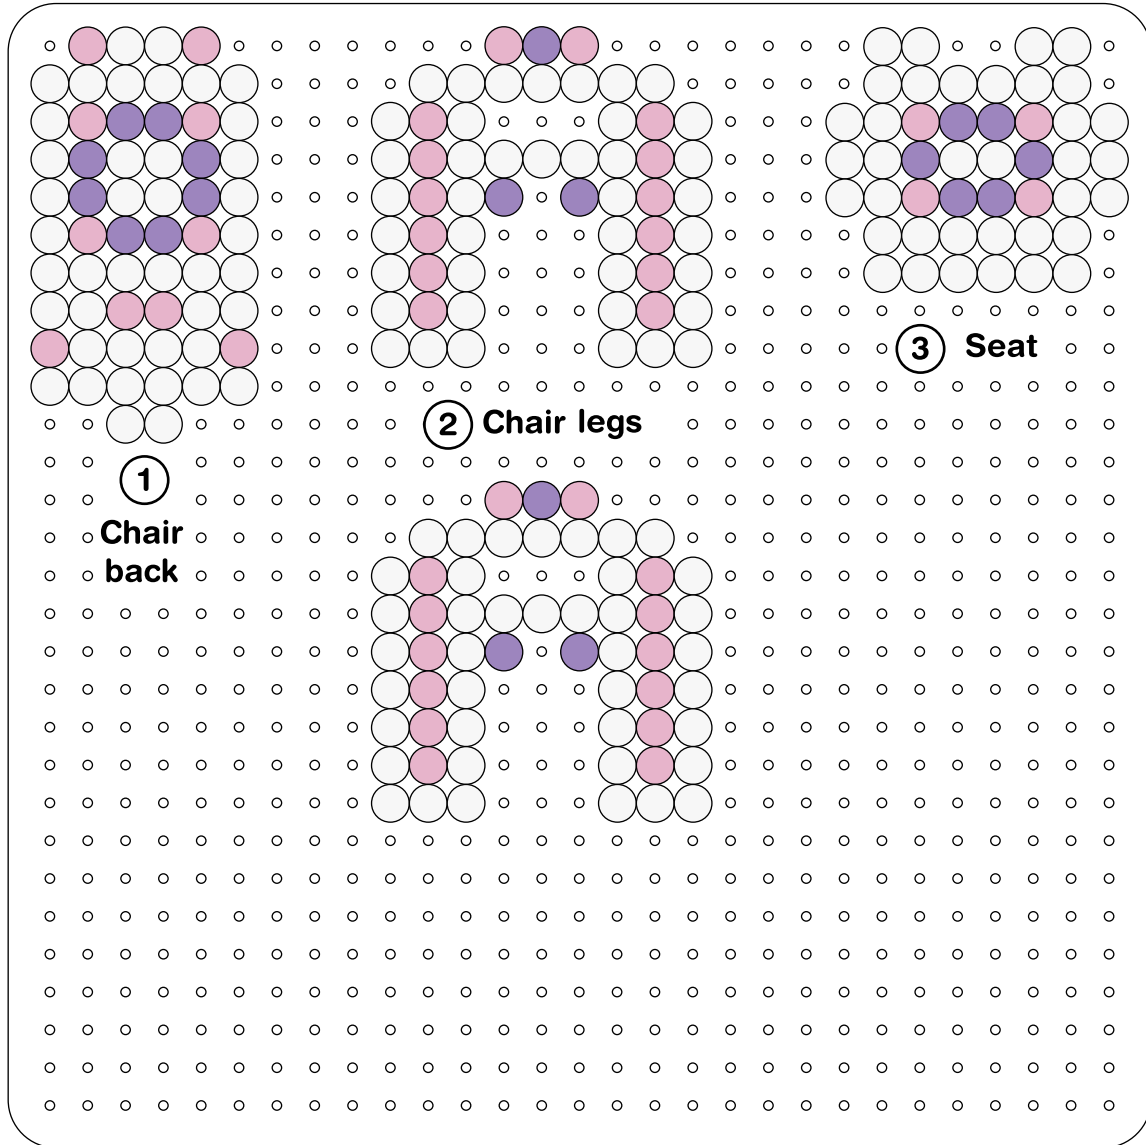Warning: Parents - the ironing must be done by an adult only. Some irons may emit steam. Please keep children at a safe distance.




**Bead Color/# Needed:**


-  Light Pink - 42
-  Purple - 20
-  White - 147

Continued on next page


**ASSEMBLY—All assembly is tab and slot.**

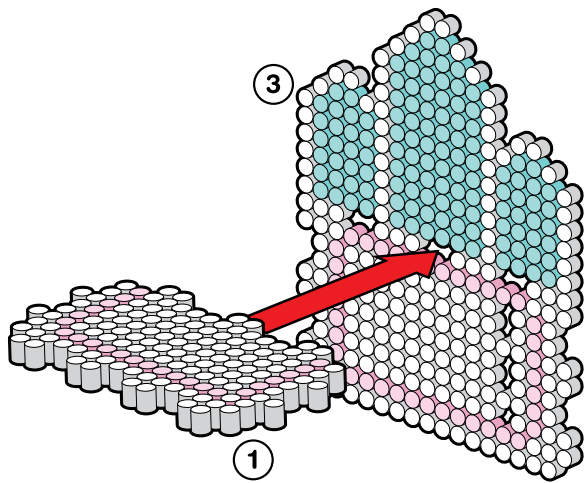


For the vanity, align the tabs on the vanity top with the slots in the vanity back and slide together with pieces at right angles to each other.

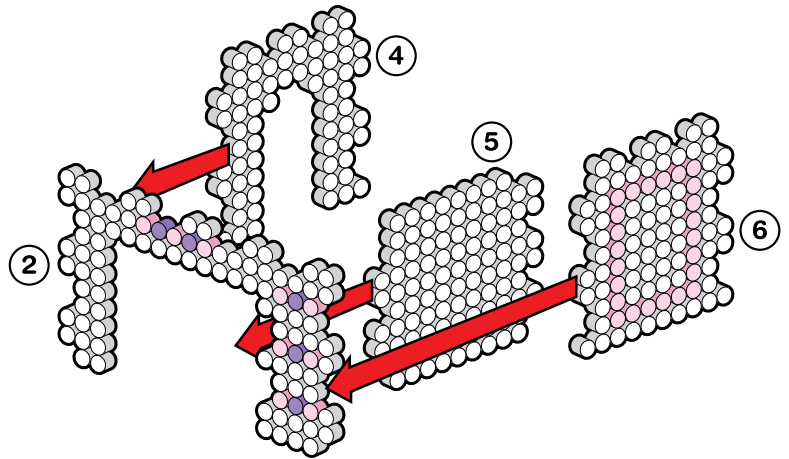

Next, connect the sides and post to the front.

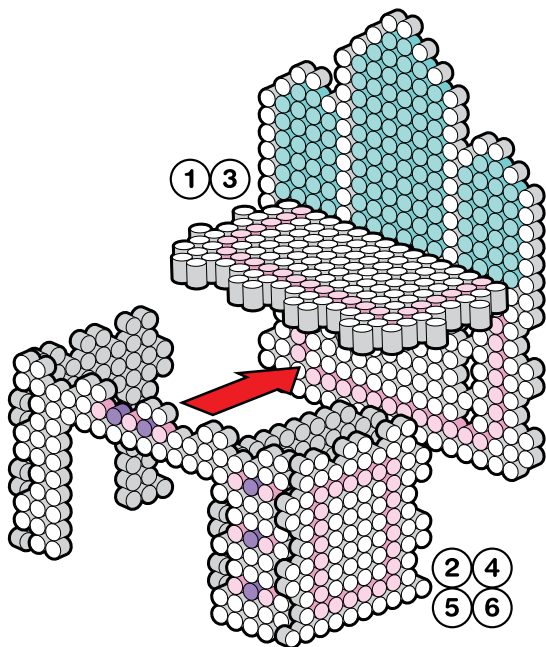

Connect the assembled back/top section to the front/sides section.

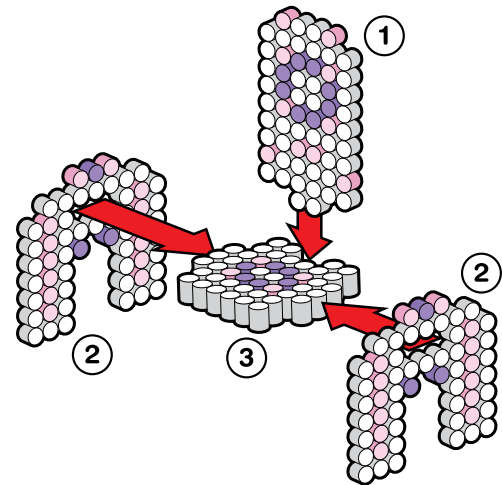

For the chair, connect the back to the seat and then add the sides.