



YOU WILL NEED:

Pegboard:

Mini Beads pegboard

Other:


Mini Beads Tweezers
Ironing paper
Iron
Pin backs
Quick-drying adhesive

Bead Colors:

- Red - 2
- Orange - 4
- Cheddar - 34
- Yellow - 58
- Kiwi Lime - 20
- Dark Green - 35
- Toothpaste - 4
- Pastel Lavender - 8
- Sand - 6
- Tan - 24
- Brown - 20
- Black - 34
- White - 80

Instructions

1. Slide the actual-size pattern under your clear pegboard and place your beads as shown.
2. Ask an adult to fuse your designs—see below for further instructions.
3. Assembly: Glue a pin back to the back of each design. Wear them on your shirt, jacket, purse, even your hat!

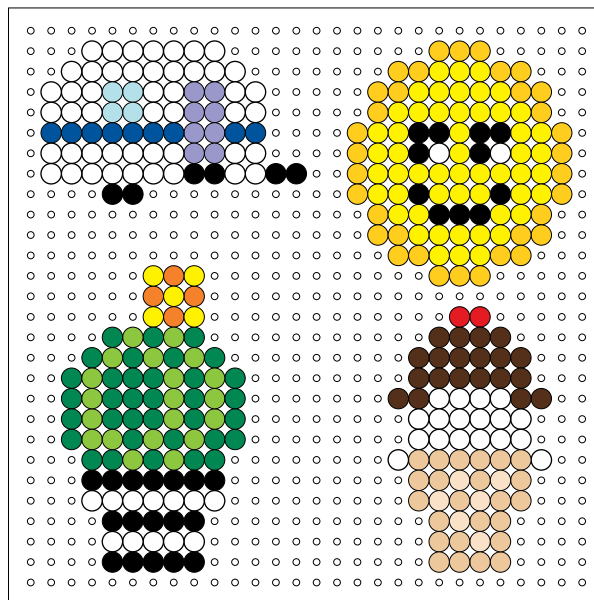

Fusing Instructions—Only Adults Iron



1. Place your pegboard on a flat, heat-safe surface.
2. Set a household iron to the medium setting. Place ironing paper over the pegboard. In a circular motion, begin to iron the project. Do not press down with the iron. When ironed properly, the beads will still have an open center. Let the design cool.
3. Remove the paper and bead design from the pegboard. Flip the design over to expose the non-fused side. Repeat step two. Let cool completely.

Beads need heat for about 10 seconds per side to fuse evenly. Depending on the size of the project, additional heating time may be required.